


# Ready to start beating your opponents?

The SpinPro helps you learn tons of padel strokes. Whether it's a side-spin serve, controlled chiquita, the bandeja, the vibora or even the rulo and kick-smash! Head over to the Get Started page to learn how and get ready to dazzle your friends.

Visit [topspinpro.com/start](https://topspinpro.com/start)



Get Started

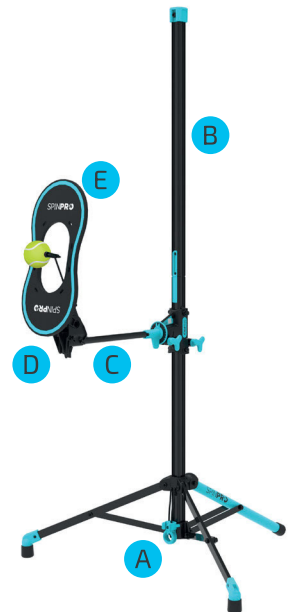


## WHAT'S IN THE BOX

- |                 |                |            |       |
|-----------------|----------------|------------|-------|
| A Tripod        | B 2x Extenders | C Ball Arm | G Bag |
| D Screen Holder | E Screens      | F Spares   |       |

### STEP 1


Set up the Tripod

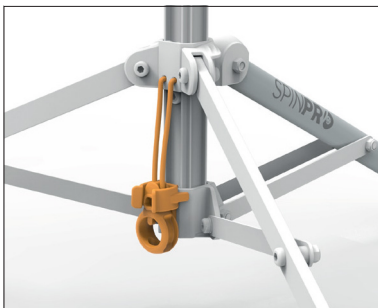

Pull the elastic toggle down to secure the tripod

### STEP 2


Mount the Ball Arm

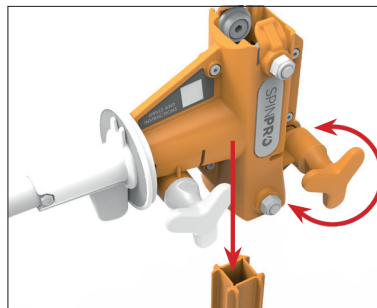

Lower Ball Arm Slider onto tripod (opposite the rear leg) & secure with righthand knob

### STEP 3


Add the Extenders

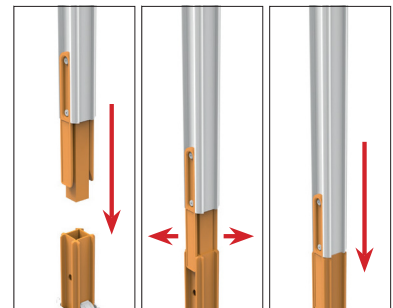

Slot the extenders into tripod, pulling clips apart until secured

### STEP 4


Install the Elastic

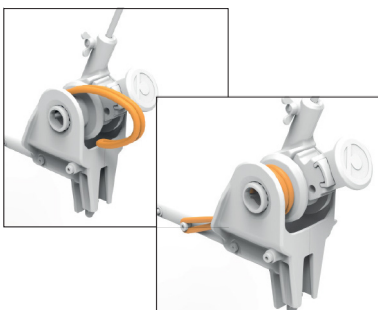

Curl the elastic around the drum and hook it over the first bolt head

### STEP 5


Install the Screen Holder

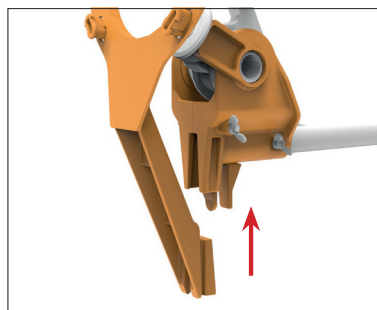

Push the base of the holder upwards until it clicks

### STEP 6

Install the Screen

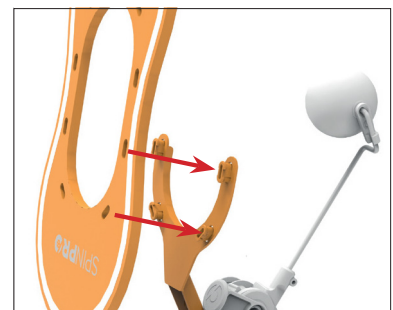

Align to screen holes and press on firmly

# Warranties & Replacement Parts

We provide a general one year warranty for the SpinPro Padel under reasonable use. However, due to the nature of how the SpinPro may be used, some components are subject to wear and tear and will need replacing sooner.

The warranty on the foam screen panels and the padel ball is six months.

Please contact TopspinPro Ltd or visit [topspinpro.com](https://topspinpro.com) to purchase replacement parts.

Maintenance: There are no specific maintenance requirements. The unit is designed to be easily disassembled and stored indoors in the bag provided.

## Warranty

if you **DID NOT** purchase from our website, please fill out this short form for our **one-year warranty**.



 [topspinpro.com/warranty](https://topspinpro.com/warranty)

## Safety Notice

Please read the instructions before assembling or using your SpinPro Padel. If you do not follow them, there is a risk of personal injury and/or damage to equipment.

Warning: SpinPro Padel is not a toy and is not intended to be used by children aged 14 or under. If children aged 14 or under do use SpinPro, they must be supervised by an adult at all times. Always follow the assembly instructions.

The SpinPro Padel is designed to be used for learning and practising particular padel strokes that require spin. Please see our instruction videos for the shots the unit is intended for. It is not intended for users to hit the unit excessively hard. It should not be used to practise 'flat' strokes. In particular, do not use it for the Flat Smash. The screens on the product are designed as a guide for the racket to slide past without making contact. Ideally the player should attempt to make the ball spin without touching the screen. **DO NOT** hit screens directly with the racket or push the screens with the racket as this may lead to the SpinPro becoming unstable and falling. In addition, if used incorrectly and the screen is hit directly, the screen may come off and you could cause damage to it.

Always ensure that the equipment is placed on firm, flat ground, with sufficient room around it to enable the user to use it comfortably and safely. Do not use on a slope or uneven ground due to the risk of the SpinPro becoming unstable and falling. Be aware of people around you when using the equipment. Please ensure there are no people within a 2.5m radius of the SpinPro in case it is used incorrectly, becomes unstable and falls.

Set the ball arm height by unlocking the screw and moving the ball arm up the SpinPro to a height where you can comfortably lock it. If for any reason you need to move the ball arm higher, bring the SpinPro forward onto its two front legs whilst holding one of the extender poles securely with one hand. Move the ball arm to required height with the other hand and lock securely. Then carefully lower the SpinPro back into a stable position. **DO NOT** move the SpinPro backwards onto the blue rear leg as it may become unstable and could fall. **ALWAYS** keep one hand on the extender pole to keep the device stable.

When unfolding or folding the stand, please take care not to pinch your fingers between the legs. When fitting together or disassembling the aluminium profile parts that form the main body of the SpinPro, please take care not to pinch your fingers between the sections. When removing the screen holder, rotate the ball arm to face downwards. Then press the release button firmly and gently slide the screen holder upwards being careful not to pinch your fingers.

Keep components (e.g. anything sharp or small) away from eyes and mouth. The small components can be a choking hazard. Please ensure they are permanently attached to the product or put away carefully.

When fitting or removing the elastic cord toggle, which keeps the stand in place, please be careful not to release it, as it could spring back and hit your hand.

When not in use, please disassemble the SpinPro to prevent people from colliding with the ball arm or tripping on the stand. Operators/players must not position themselves under the ball arm at any point. When lowering or raising the ball arm, one hand must be placed on the ball arm to prevent it from falling.

Do not over-tighten the screws which operate turning the ball arm and moving it up and down. Doing so could lead to them breaking. We recommend you tighten lightly using your fingers but do not force them as they may break.

SpinPro for Padel has been assessed by EdgeComply Ltd in accordance with the following standards:

GPSR General Product Safety Regulation (EU) 2023/988 and The General Product Safety Regulations (UK) 2005 (SI 2005/1803).

The SpinPro is trademarked and protected by patents in:

The USA (9,623,312 B2), UK, Europe (003143544-001), Japan (6374402), China (201490000530X) and Australia (2014209998).

It is manufactured in China and is imported into Europe, the US, Canada, Japan and Australia by:

TopspinPro Ltd, Lex Farm House, Milford Road, Elstead, GU8 6HZ, United Kingdom. Contact [love-all@topspinpro.com](mailto:love-all@topspinpro.com).