


Ready to master spin?

The SpinPro helps you learn tons of tennis strokes. Whether it's a slice backhand, topspin forehand, drive volley or even the banana forehand! And if you have the Serve Pack, the kick serve and slice serve come into play. Head over to the Get Started page to learn how and get ready to dazzle your friends.

Visit topspinpro.com/start




Get Started

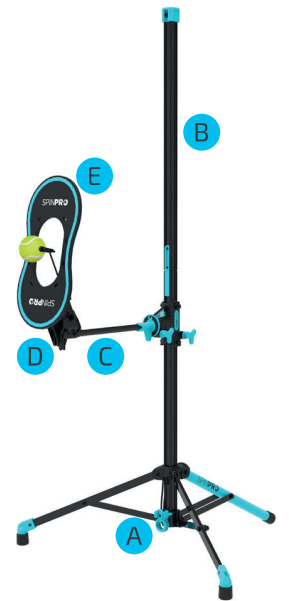


WHAT'S IN THE BOX (A-F) A Tripod B Extender C Ball Arm D Screen Holder E Screens F Spares
 WITH SERVE PACK (G-K) G Racket Screen H Extender I Mat J Sandbag K Spare Ball

STEP 1 Set up the Tripod

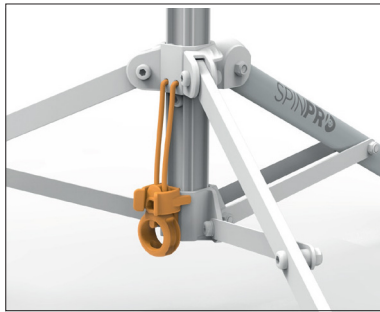


Pull the elastic toggle down to secure the tripod

STEP 2 Mount the Ball Arm

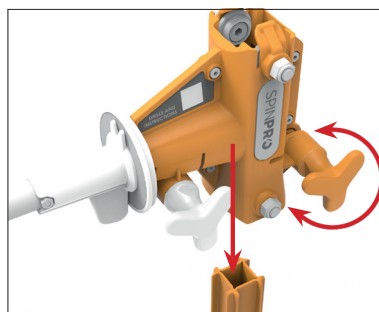

Lower Ball Arm Slider onto tripod (opposite rear leg). Secure with righthand knob

STEP 3 Add the Extender

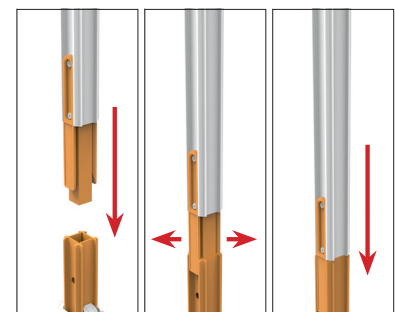


Slot the extender into tripod, pulling clips apart until secured

STEP 4 Install the Elastic



Curl elastic around drum and hook it over the first knob

STEP 5 Install Screen Holder

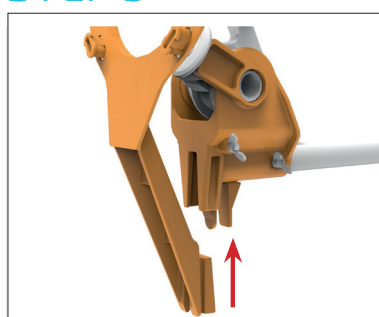

Push the base of the holder upwards until it clicks


STEP 6 Install the Screen



Align to screen holes and press on firmly

SERVE PACK ONLY When using the Serve Pack, add extra extender as per step 3 and follow steps 7-9 below.

STEP 7 Sandbag for Serve

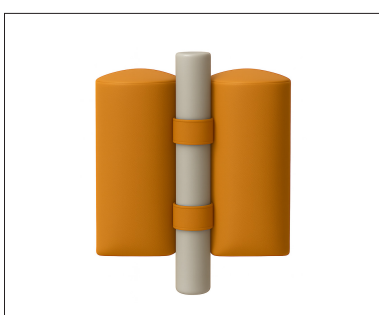


Always use weighted sandbag on rear leg when serving to give added stability

STEP 8 Insert Bottles



Insert one 900-1500ml water bottle (not provided) into each of the two sandbag pockets

STEP 9 Attach Sandbag

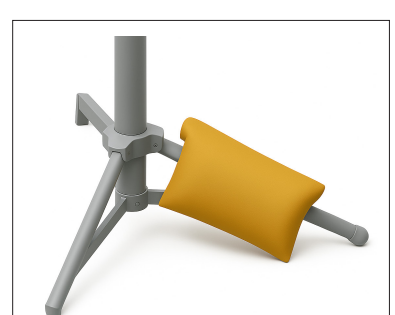

Attach sandbag towards top of rear leg using velcro straps

Warranties & Replacement Parts

We provide a general one year warranty for the Tennis SpinPro under reasonable use. However, due to the nature of how the SpinPro may be used, some components are subject to wear and tear and will need replacing sooner.

The warranty on the foam screen panels and the tennis ball is six months.

Please contact TopspinPro Ltd or visit topspinpro.com to purchase replacement parts.

Maintenance: There are no specific maintenance requirements. The unit is designed to be easily disassembled and stored indoors.

Warranty

if you **DID NOT** purchase from our website, please fill out this short form for our **one-year warranty**.



 topspinpro.com/warranty

Safety Notice

Please read the instructions before assembling or using your Tennis SpinPro. If you do not follow them, there is a risk of personal injury and/or damage to the equipment.

Warning: Tennis SpinPro is not a toy and is not intended to be used by children aged 14 or under. If children aged 14 or under do use SpinPro, they must be supervised by an adult at all times. Always follow the assembly instructions.

The SpinPro is designed to be used for learning and practising particular tennis strokes that require spin - it should not be used to practise 'flat' strokes. Please see our instruction videos for the shots the unit is intended for. It is not intended for users to hit the unit excessively hard. The screens on the product are designed as a guide for the racket to slide past without making contact. Ideally the player should attempt to make the ball spin without touching the screen. **DO NOT** hit screens directly with the racket or push the screens with the racket as this may lead to the SpinPro becoming unstable and falling. In addition, if used incorrectly and the screen is hit directly, the screen may come off and you could cause damage to it.

Always ensure that the equipment is placed on firm, flat ground, with sufficient room around it to enable the user to use it comfortably and safely. Do not use on a slope or uneven ground due to the risk of the SpinPro becoming unstable and falling. Be aware of people around you when using the equipment. Please ensure there are no people within a 2.5m radius of the SpinPro in case it is used incorrectly, becomes unstable and falls.

Set the ball arm height by unlocking the knob and moving the ball arm up the SpinPro to a height where you can comfortably lock it. If for any reason you need to move the ball arm higher, tilt the SpinPro forward onto its two front legs whilst holding the extender pole securely with one hand. Move the ball arm to required height with the other hand and lock securely. Then carefully return the SpinPro back into a stable position. **DO NOT** move the SpinPro backwards onto the blue rear leg as it may become unstable and could fall. **ALWAYS** keep one hand on the extender pole to keep the device stable.

Always use the weighted sandbag when using the SpinPro to practise serving or the unit may become unstable and fall. Add one 900-1500ml filled water bottle (not provided) into each of the two sandbag pockets and attach to rear leg using velcro straps.

When unfolding or folding the stand, please take care not to pinch your fingers between the legs. When fitting together or disassembling the aluminium extender pole(s) that form the main body of the SpinPro, please take care not to pinch your fingers between the sections. When removing the screen holder, rotate the ball arm to face downwards. Then press the release button firmly and gently slide the screen holder upwards being careful not to pinch your fingers.

Keep components (e.g. anything sharp or small) away from eyes and mouth. The small components can be a choking hazard. Please ensure they are permanently attached to the product or put away carefully.

When fitting or removing the elastic cord toggle, which keeps the stand in place, please be careful not to release it, as it could spring back and hit your hand.

When not in use, please disassemble the SpinPro to prevent people from colliding with the ball arm or tripping on the stand. Operators/players must not position themselves under the ball arm at any point. When lowering or raising the ball arm, one hand must be placed on the ball arm to prevent it from falling.

Do not over-tighten the knobs which operate turning the ball arm and moving it up and down. Doing so could lead to them breaking. We recommend you tighten lightly using your fingers but do not force them as they may break.

The SpinPro is trademarked and protected by patents in:

The USA (9,623,312 B2), UK, Europe (003143544-001), Japan (6374402), China (201490000530X) and Australia (2014209998).

It is manufactured in China and is imported into Europe, the US, Canada, Japan and Australia by:

TopspinPro Ltd, Lex Farm House, Milford Road, Elstead, GU8 6HZ, United Kingdom. Contact love-all@topspinpro.com.